

FRONT


SPECIFICATIONS

- Earbud weight: 3 grams each earbud
- Speaker driver size: 13mm
- Supported profiles: A2DP, HFP, HSP, AVRCP
- Bluetooth version: 5.2
- Earbud charging time: Up to 30 minutes
- Working voltage: 3.7V
- Standby time: Up to 100 hours
- Playtime: Up to 6 hours at 70% volume
- Bluetooth range: 10 m
- Waterproof rating: IPX5
- Working temperature: 0-40°C

CHARGING CASE SPECIFICATION

- Charging case weight: 34 grams
- Charging port: Type-C
- Number of earbud charges from case: Up to 4 times
- Case charging time: Up to 1.5 hours
- Total playtime with charging case: Up to 30 hours

PACKAGE CONTAINS

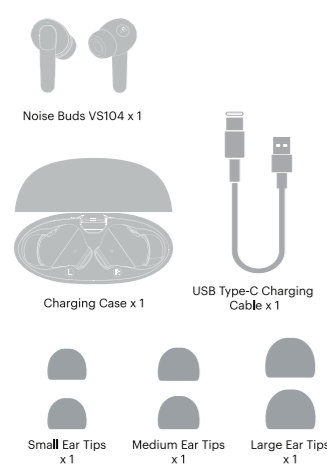

POWER ON

The earbuds will automatically turn on when the charging case is opened.

POWER OFF

The ear buds will turn off automatically on closing the charging case.

PAIRING

- Open the charging case.
- Turn on the Bluetooth of your device.
- Select Add Device and from the list of devices, select Noise Buds VS104.
- Your Noise Buds VS104 are now paired with your device and ready to use.
- Note: Your Noise Buds VS104 will automatically connect to the last paired device as soon as you take them out of the charging case.



RESET

- Make sure your earbuds are fully charged.
- On your paired devices, delete/remove Noise Buds VS104 from the list of paired devices in the Bluetooth menu.
- Take out the earbuds from the charging case.
- Long press both the earbuds for 5 seconds.
- Place both the earbuds inside the charging case and repeat the pairing process.

CHOOSING YOUR EAR TIP SIZE

- Earphones are fitted with medium-sized tips. However, if you find they don't fit perfectly, please remove and try the small and large ear tips.
- Follow the images and chart to learn how to wear the earbuds in the right manner.



CONTROLS

Play/Pause
Tap either earbud twice



Previous Song
Long press the left earbud for 2 seconds



Next Song
Long press the right earbud for 2 seconds



Volume Up
During music: Tap the right earbud once
During calls: Long press the right earbud



Volume Down
During music: Tap the left earbud once
During calls: Long press the left earbud



BACK

CONTROLS

Answer/End a Call
Tap twice on either earbud to answer
Tap twice on either earbud to end



Reject Call
Long press either earbud for 2 seconds



Voice Assistant
Tap either earbud thrice



CHARGING

EARBUDS

Place both earbuds inside the case to charge them.

- **Red Solid LED** Charging
- **No LED** Fully Charged

CASE

Charge the case via the supplied Type-C charging cable preferably from any PC or laptop as compared to a USB charger.

INDICATION

- **Blinking White LED** Charging
- **Solid White LED** Fully Charged



WARRANTY

The warranty covers your Noise product, including accessories against manufacturing defects (if any) for 1 year from the date of purchase.

Things that are not covered in the warranty

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not in accordance with the product manual or documentation, or any other instruction provided along with the Noise product.

For further information on product replacement/refund related queries, please refer to the terms and conditions mentioned in our online return policy section on www.gonoise.com.

WARRANTY REGISTRATION

www.gonoise.com/pages/warranty-registration

- ✓ SUPPORT AND SERVICE
- 📅 1 YEAR LIMITED WARRANTY



SCAN ME

CUSTOMER QUERY

For any assistance, please reach out to us at support.gonoise.in

SAFETY FOR YOU AND YOUR Noise Buds VS104

Follow these tips so you can get the best out of your Noise Buds VS104

- Do not expose earbud to liquids, moisture or humidity. It has electronics and a battery in it.
- Don't try to disassemble the earbud. There are no user serviceable parts inside it.
- Don't use abrasive cleaning solvents to clean it. Wipe it down with a slightly damp cloth if and when necessary.
- Try not to drop the earbud and keep it away from sharp objects such as keys in your pockets.
- Remove and clean the earbud tips regularly, to ensure that you always enjoy the best sound possible.
- Charge the earbud from 5V USB ports such as phone chargers and laptops or PCs.
- Do not expose it to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.
- Never listen to music at high volumes or you may permanently damage your hearing.
- Don't throw the earbud in a fire to dispose it. The internal battery may explode.
- Pay attention to your surroundings and never wear ANY headphones while riding, driving or walking in traffic.

Buds VS 104

Please refer to this manual before using the product